


# Performance Friction Brakes Rear Brake Kit Template - ZR31 Caliper Corvette C6 Z06

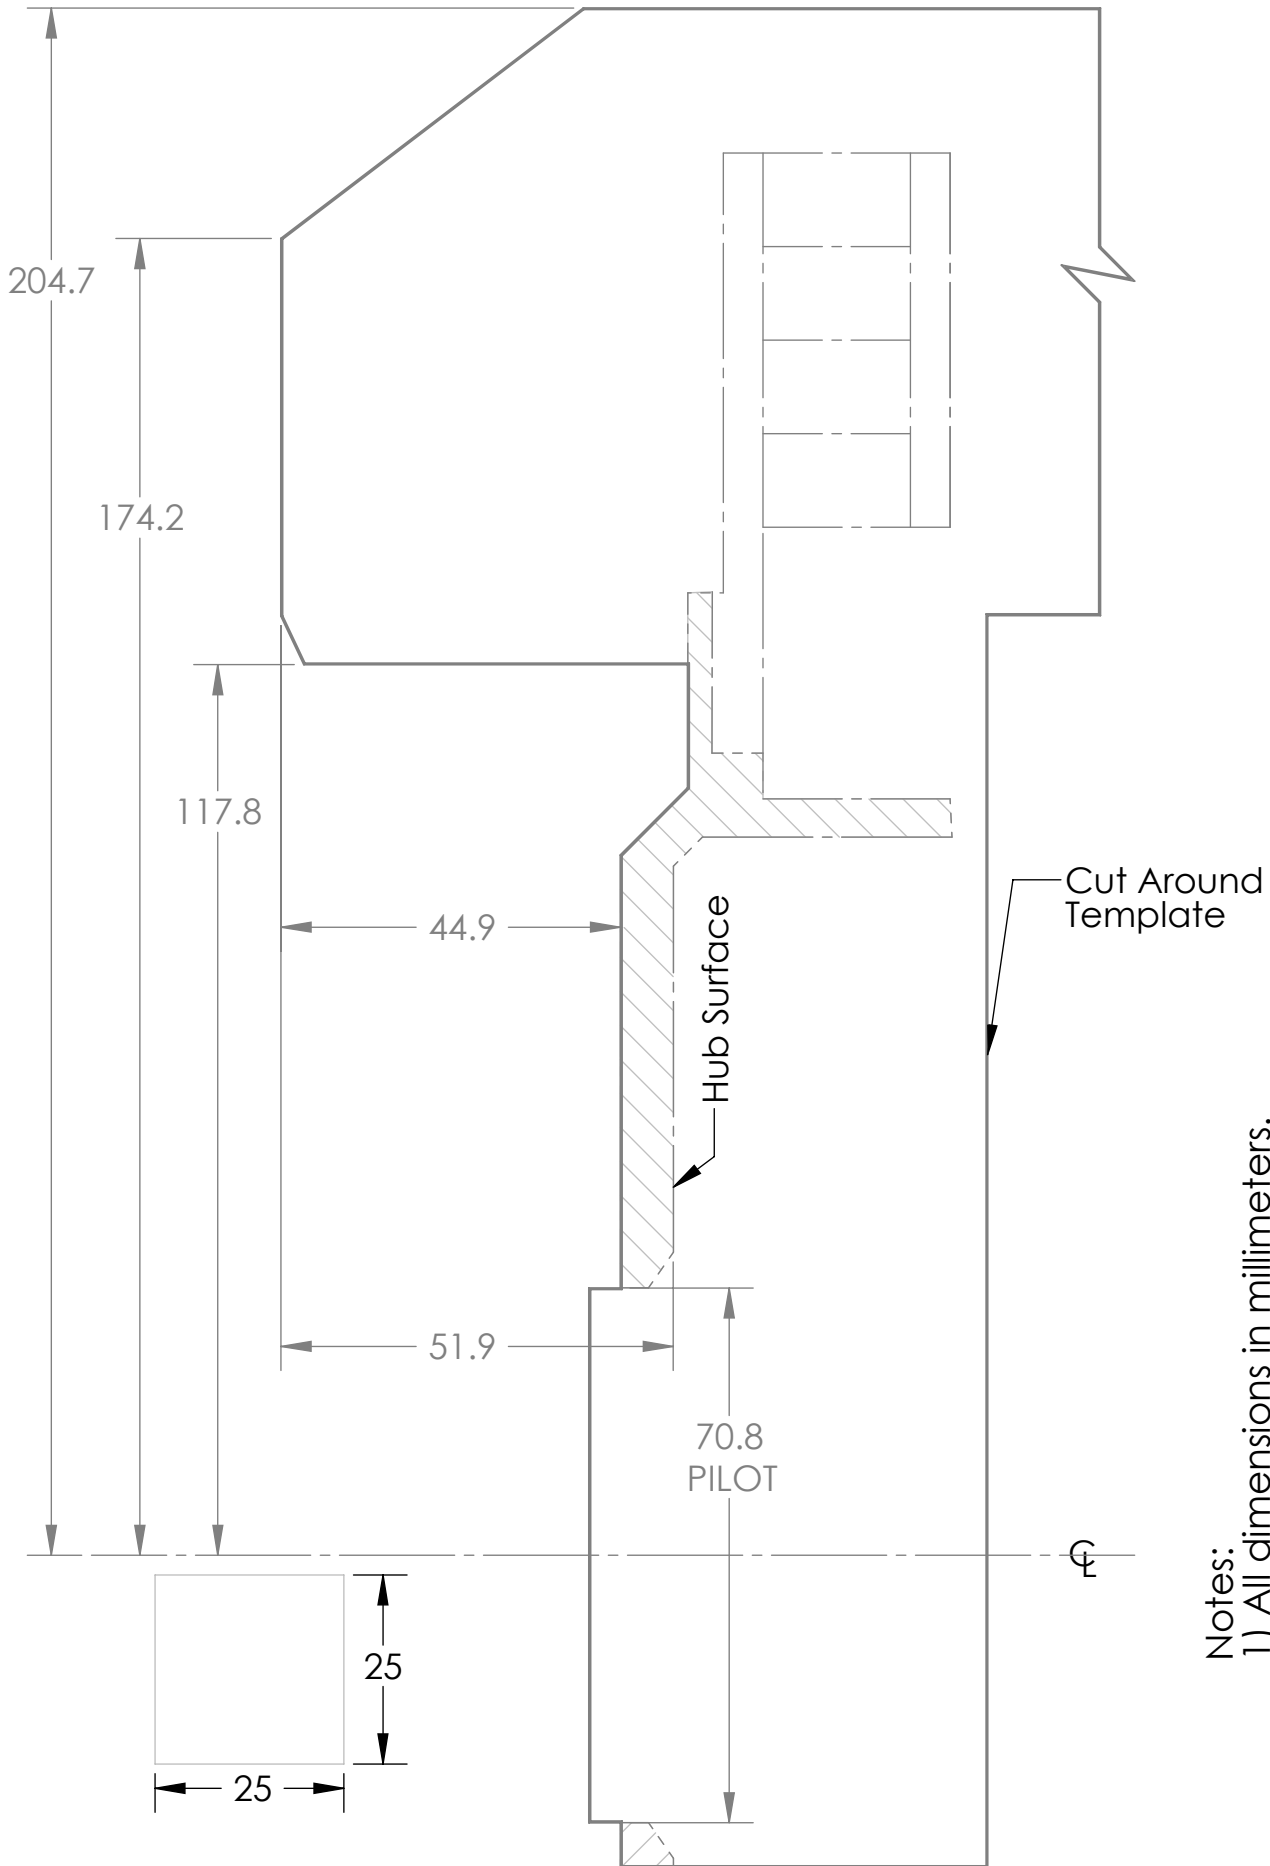

- Notes:
- 1) All dimensions in millimeters.
  - 2) Add at least 2 mm of clearance to template dimensions to ensure fitment in wheel.
  - 3) Print and confirm 25 mm square reference dimensions. Enlarge or reduce print to proper scale so template is accurate size - 1:1.
  - 4) Place template in wheel center and rotate to ensure clearance.