


Performance Friction Brakes Front Brake Kit Template - ZR31 Caliper Corvette C6 Z06

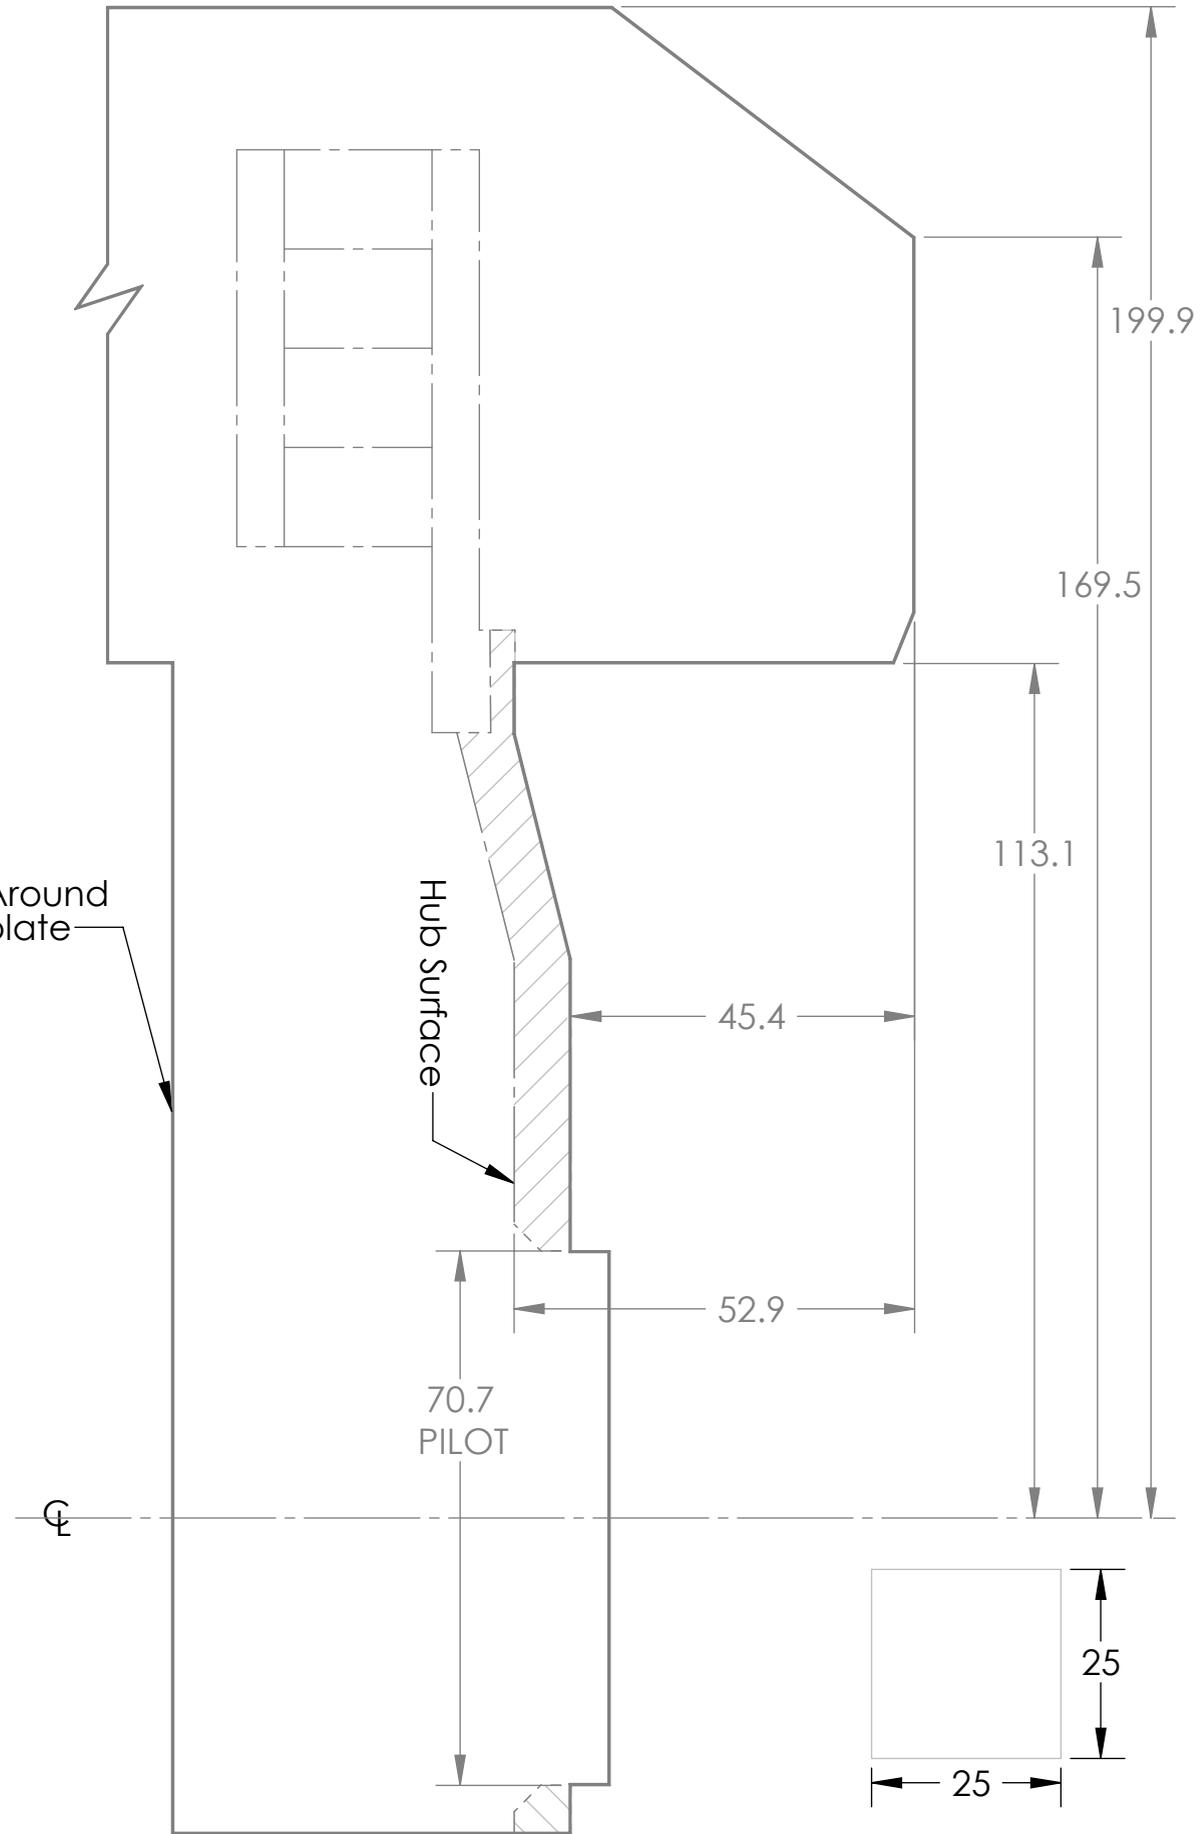

Cut Around
Template

Notes:

- 1) All dimensions in millimeters.
- 2) Add at least 2 mm of clearance to template dimensions to ensure fitment in wheel.
- 3) Print and confirm 25 mm square reference dimensions. Enlarge or reduce print to proper scale so template is accurate size - 1:1.
- 4) Place template in wheel center and rotate to ensure clearance.